

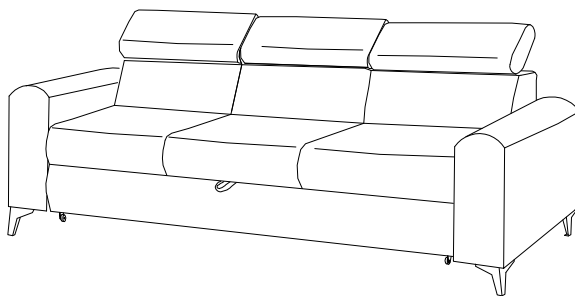
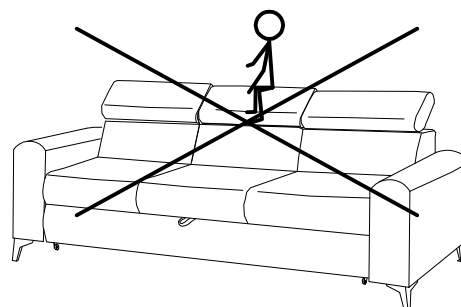
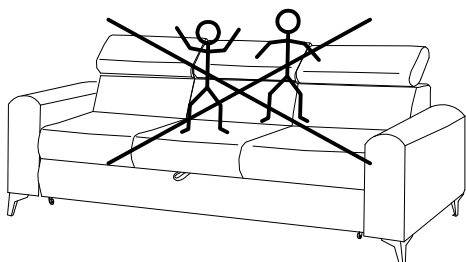
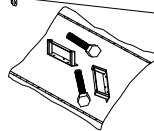
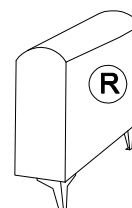


# BJORN






## SOFA

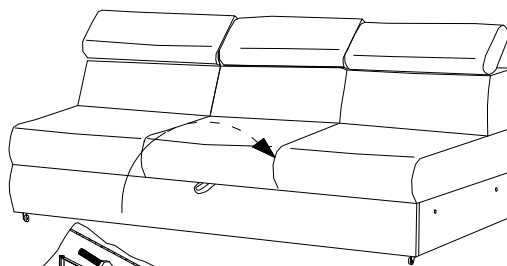





M8.0x60mm  A	 A2	 B	13.5cm  C
4	4	4	3
5.0x35mm  D	4.0x55mm  E	10cm  F	4.0x45mm  G
16	8	2	2

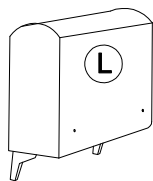




1

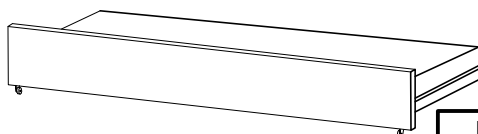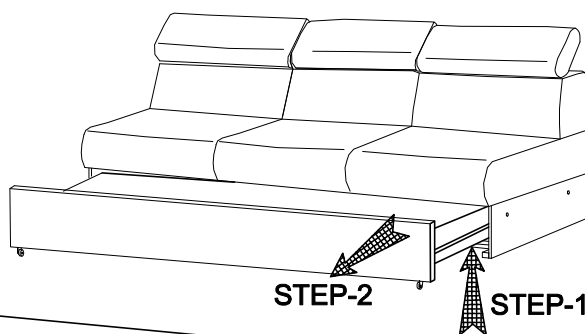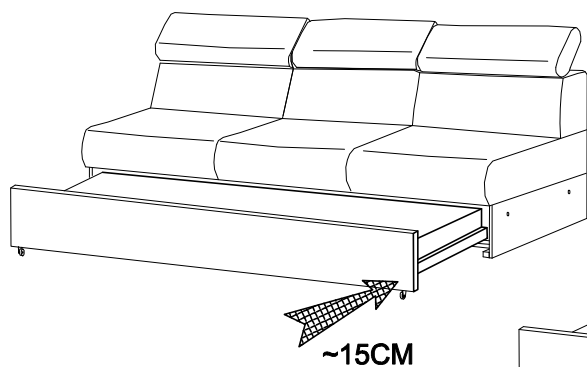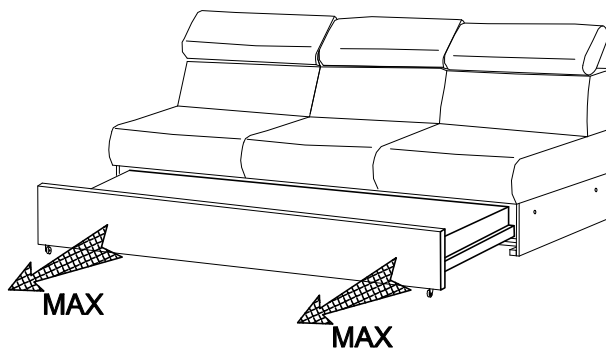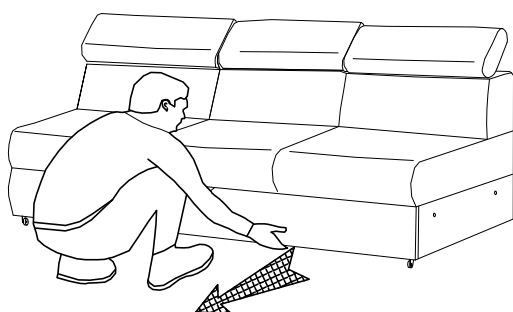


2

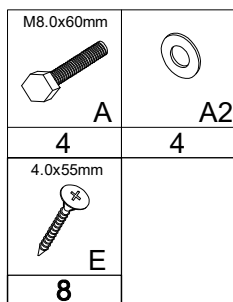




STEP-1

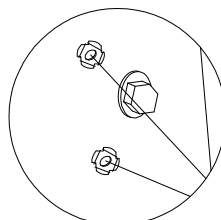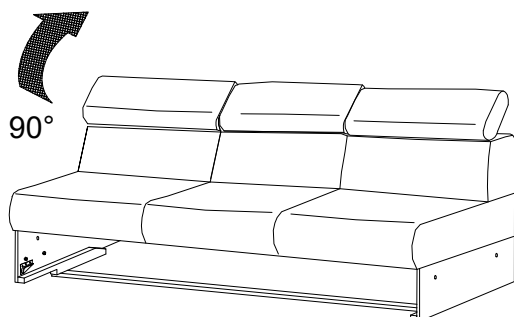



STEP-2

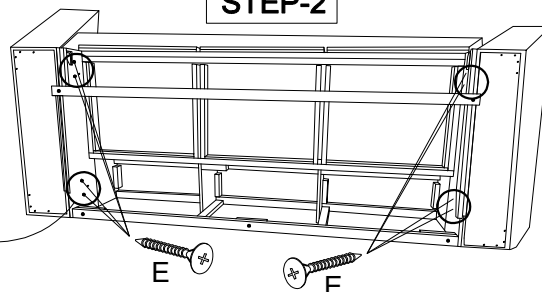



3

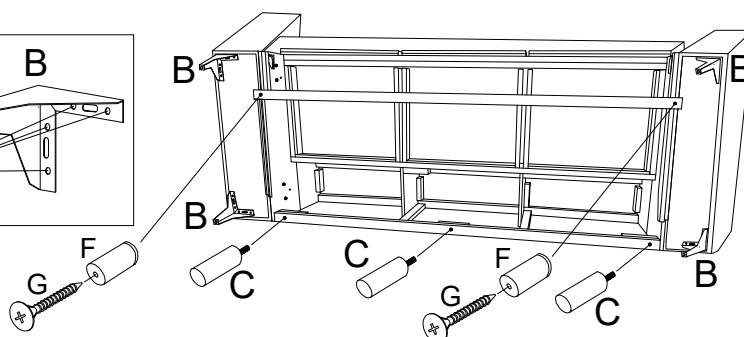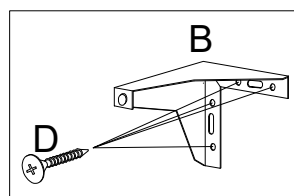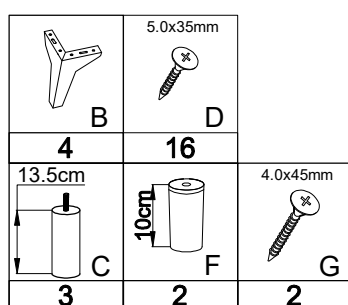





4

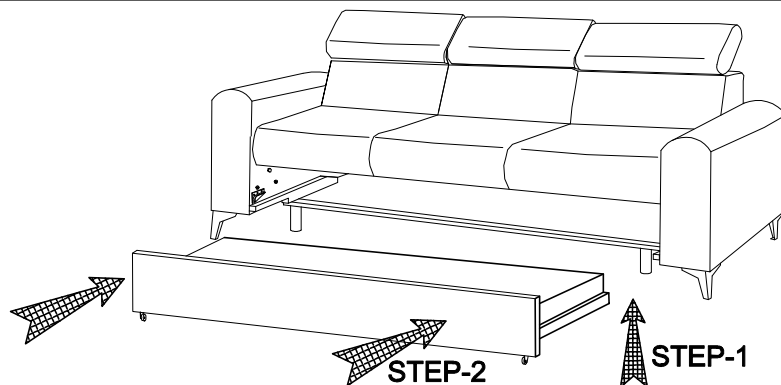

90°

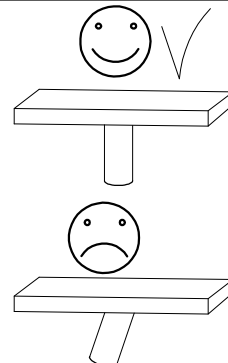

5

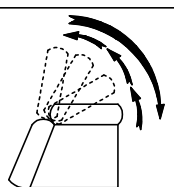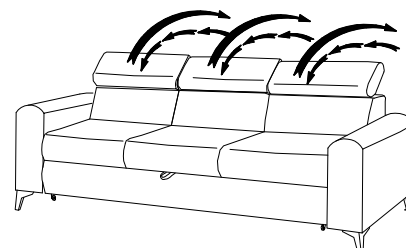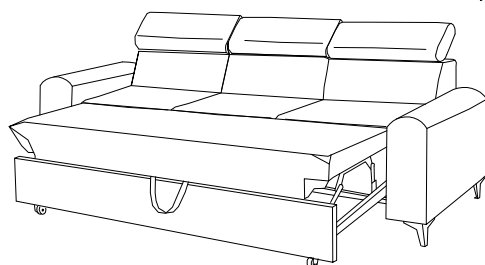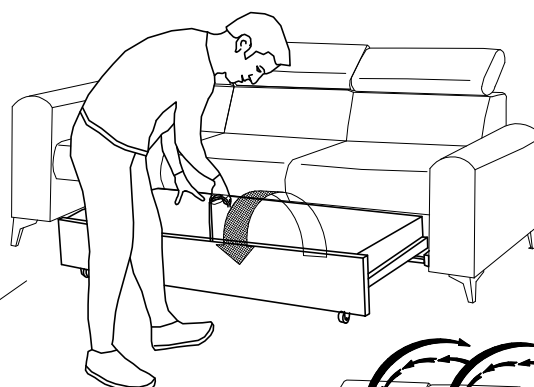

BJORN - SOFA

2/2