

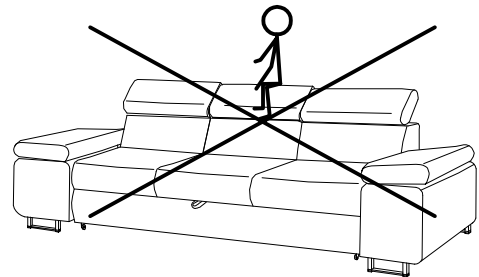
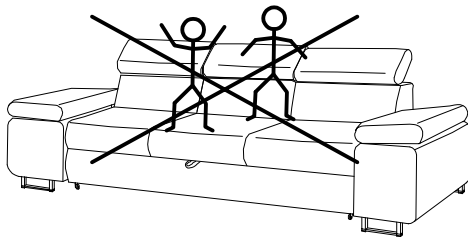

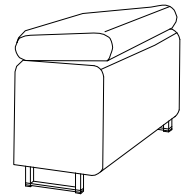
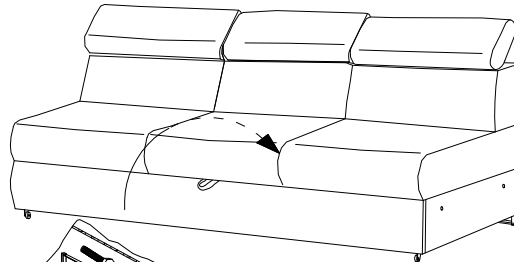
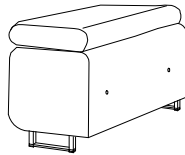
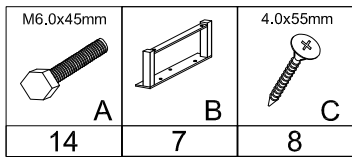
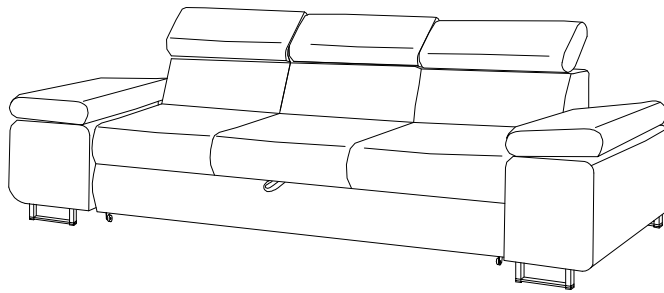
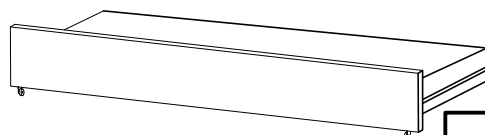
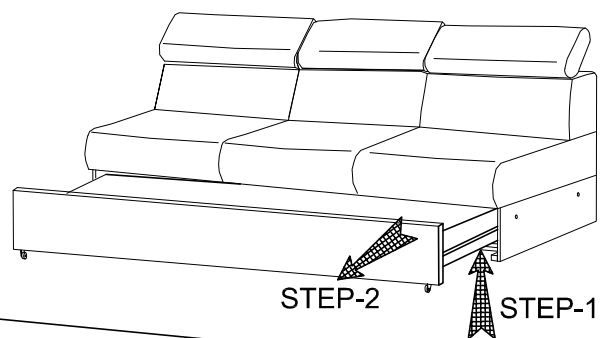
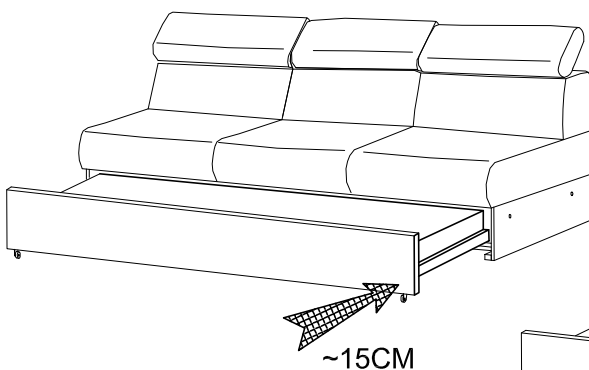


NORBERG - SOFA

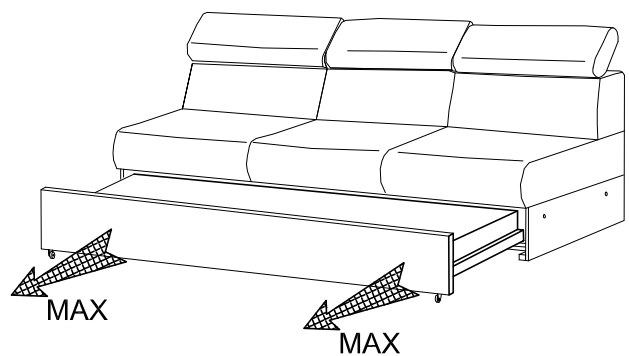





1

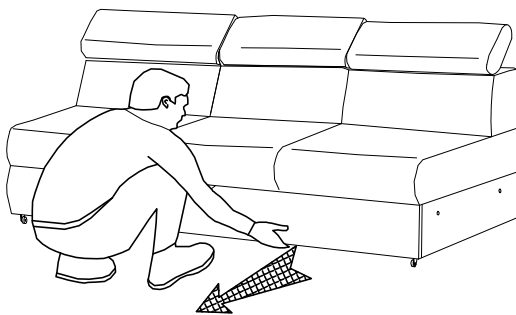

2



M6.0x45mm A	4.0x55mm C
4	8

90°

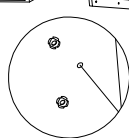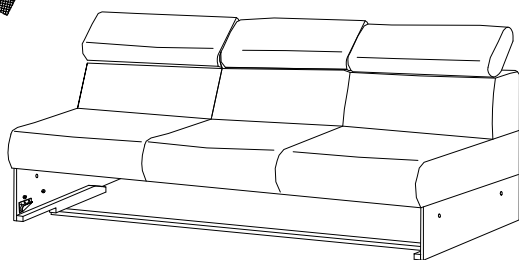



A

A

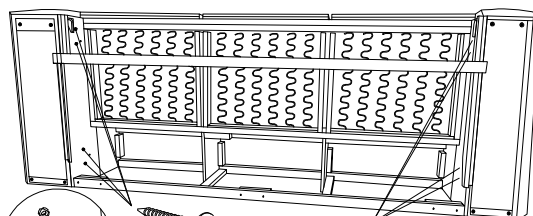

C


C





10

3

M6.0x45mm A	B
14	7




10

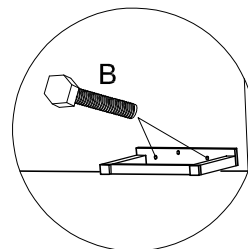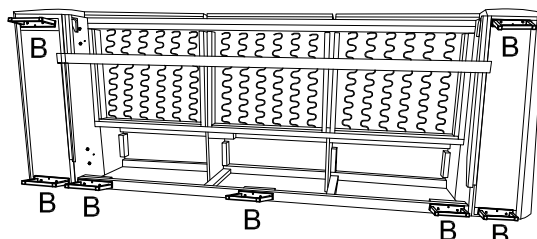

B

4

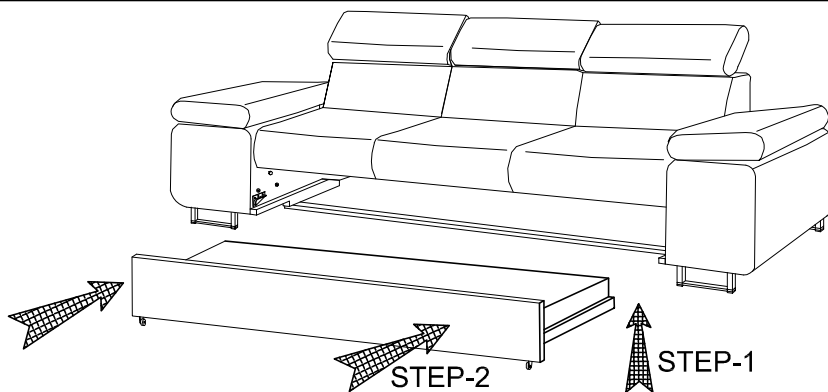

STEP-2

STEP-1

5

